Fold-A-Matic Spacesaver
Assembly Instructions

For models XV-3-XB, XV-4-XB, XX-3-XB, XX-4-XB

Tools Required: Phillips screwdriver, drill with 1/16" bit.

Parts Included:

(Parts A, C, D, E, F come pre-assembled)

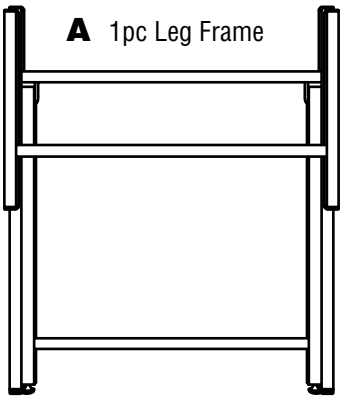

A 1pc Leg Frame

B 1pc Tabletop
(Shipped in separate box)



C 2pcs Board Mounting Brackets

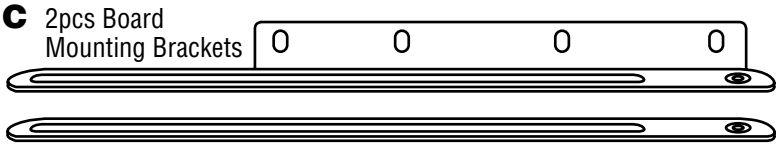

D 2pcs Angle Adjustment Brackets

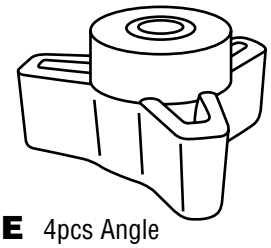

E 4pcs Angle Adjustment Knobs

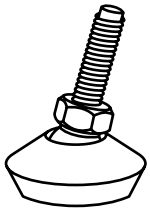

F 2pcs Adjustable Height Glides

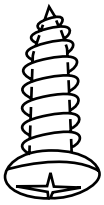

G 8pcs 1/2" Wood Screws

To Assemble:

1 Unpack all parts and inspect to confirm that all are present.

2 Place tabletop (**B**) with preferred side facing down on carpeted or protected floor. For **24" x 36"** top, measure 5" from base edge of board and place frame on board. For **31" x 42"** top, measure 7" from base edge of board and place frame on board.
Left and right edges of frame (**A**) should be an equal distance from each side of the tabletop as shown in ***Figure 1***.
With the frame now centered on the tabletop, using a 1/16" drill bit, gently drill 1/4" deep holes through the holes in the two mounting brackets (**A**).

TIP Wrap masking tape 1/4" from drill bit end to determine drilling depth. Take care to drill only 1/4" deep to avoid drilling through and damaging tabletop surface.

3 Using the Phillips screwdriver, securely screw the mounting brackets to the tabletop using the supplied screws as shown in ***Figure 1***. Carefully return the table assembly to the upright position.

4 Adjust tabletop as desired using the angle adjustment knobs (**E**).

5 Level the legs with the adjustable height glides (**F**).

You're finished and your table is ready to use as shown in ***Figure 2***.

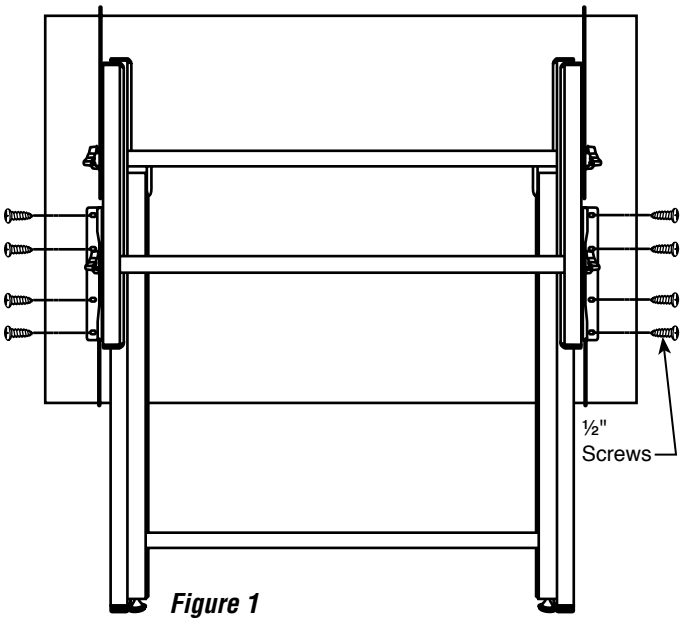

Figure 1

Fold-A-Matic Spacesaver Models

Model	Base	Top
XV-3-XB	Black	24" x 36"
XV-4-XB	White	24" x 36"
XX-3-XB	Black	31" x 42"
XX-4-XB	White	31" x 42"

Figure 2

©2008 **ALVIN & COMPANY, INC.** • P.O. Box 188, Windsor, CT 06095-0722
Phone: 860-243-8991 • Toll-Free: 800-444-2584 • Fax: 860-242-8037 • Toll-Free Fax: 800-777-2896

www.alvinco.com

LIT-A8059 4/08